





### Manual mode

- In any position (but the minimum position against the ceiling), when manually push up the TV ceiling mount over a distance. The TV ceiling mount will automatically return back to the minimum position against the ceiling.
- In the minimum position, when manually push up the TV ceiling mount over a little distance. The TV ceiling mount will automatically unfold at the maximum position.



### LEARN MODE operation instructions



The loss of matched remote control would result in TV ceiling mount being unusable. The **LEARN MODE** is used to learn how to use TV remote (ONLY suitable for the TV remote of popular brands.) to control TV ceiling mount.


#### Note:



- TV remote can't replace the all functions of matched remote control. Only **LEARNING** the three buttons functions. With ,  and  respectively.
- The user must follow the rules below when using the TV remote to control TV ceiling mount. Select the alternate buttons from the TV remote, and the button that can't direct control the TV.
- If you need to erase all the button functions LEARNED, press and hold  for 4 seconds and repeat five times.  
If you don't erase them, the new button functions LEARNED every time will overwrite the last button functions LEARNED.

**LEARN MODE** instructions as shown below:

**STEP1:** Press and hold  for 5 seconds until LED light on the matched remote control stays on, and then press . The buzzer will sound once, the red LED light on the IR receiver will stay on, then the **LEARN MODE** will be entered.


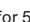


**STEP2:** If **LEARN** , please press  on the matched remote control until the buzzer sounds twice, the red LED light on the IR receiver will change from being steady to a slow flash.


**STEP3:** Aim the TV remote at the IR receiver, and press the button on the TV remote that you need to set as the function of  button until the buzzer sounds three times. the red LED light on the IR receiver will change from slow flash to a fast flash.

**STEP4:** Press  button on the matched remote control until the buzzer sounds four times. The red LED light on the IR receiver will turn off.  button will be **LEARNED** successfully. If the buzzer only sounds once, then a **LEARN** failure. (The TV remote won't support the **LEARNING** function).

(Please follow step1 through step4 in turn if the user need to **LEARN** more buttons.)

#### Learn "Power" button on the TV remote:

Press and hold  for 5 seconds until LED light on the matched remote control stays on, and then press . The buzzer will sound once, the red LED light on the IR receiver will stay on, then press and hold  button on the matched remote control until the buzzer sounds twice, then release the  button. The red LED light on the IR receiver will change from being steady to a slow flash.

Aim the TV remote at the IR receiver, and press "Power" button. The buzzer will sound three times. The red LED light on the IR receiver will change from slow flash to a fast flash. Press  button on the matched remote control until the buzzer sounds four times. The red LED light on the IR receiver will turn off. "Power" button will be **LEARNED** successfully. If press "power" button, the TV wall mount will automatically reset.

**Note:** When there is no activity for over 20 seconds in any step .TV remote will automatically exit from the **LEARN MODE**.



## M Motorized Ceiling Mount 32-55"

- ar والبلازما TFT و LCD حامل التركيب في السقف لشاشات
- dk Loftsbeslag til LCD-skærm, TFT-skærm og plasmaskærm
- de Deckenhalterung für LCD-, TFT- und Plasma-Geräte
- el Βραχίονας Οροφής για οθόνες LCD, TFT και Plasma
- en Ceiling Bracket for LCD, TFT and Plasma
- es Soporte de techo para LCD, TFT y Plasma
- fi Kattokiinnike LCD-, TFT- ja plasmanäyttöille
- fr Support plafond pour écrans LCD, TFT et plasma
- it Staffa per il montaggio a soffitto di LCD, TFT e plasma
- no Takbrakett for LCD, TFT og plasma
- pl Uchwyt sufitowy do monitora LCD, TFT i plazmowego
- ru Потолочный кронштейн для ЖК, плазменного телевизора или TFT
- se Takfäste för LCD-, TFT- och plasmaskärm
- tr LCD, TFT ve Plazma Tavan Desteği
- zh LCD, TFT 和等离子电视的天花板支架



**التركيب الهام:** LCD أو التلفاز أو حاسوب أو شاشة أو حارس أو أجهزة ذاتي أو أجهزة أخرى أو أجهزة ذات الصلة طبقاً لكاتب الوارد. يرجى التأكد من أن الحارس أو التلفاز أو حاسوب أو شاشة أو حارس أو أجهزة ذاتي أو أجهزة أخرى أو أجهزة ذات الصلة طبقاً لكاتب الوارد. يرجى التأكد من أن الحارس أو التلفاز أو حاسوب أو شاشة أو حارس أو أجهزة ذاتي أو أجهزة أخرى أو أجهزة ذات الصلة طبقاً لكاتب الوارد.



**IMPORTANTE!**  
I vostri plasma, LCD, TV, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti in dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più idonee in caso di necessità.



**VIKTIGT!**  
Din plasmaskärm, LCD-skärm, tv, projektor, projektorsskärm eller andet HiFi-udstyr repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt.



**VIKTIG!**  
Din plasma, LCD, TV, projektor, projektorsskjem eller annet HiFi-utstyr har betydelig verdi. Hvis skruer følger med, er det ikke sikkert at de passer til materialet i veggen, taket eller gulvet. Bytt skruene i skruer som er egnet om nødvendig.



**ACHTUNG!**  
Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellt einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material Ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben.



**UWAGA!**  
Monitor plazmowy, LCD, telewizor, projektor, ekran projekcyjny lub inny sprzęt HiFi stanowi znaczną wartość. Jeśli dołączono do niego śruby mocujące, mogą one nie być odpowiednie do materiału, z którego wykonano ścianę, sufit lub podłogę. W razie potrzeby należy je zastąpić odpowiednimi śrubami.



**ΣΗΜΑΝΤΙΚΟ!**  
Οι τηλεοράσεις Plasma, LCD, οι κανονικές τηλεοράσεις, οι οθόνες προβολών ή άλλες συσκευές HiFi έχουν μία αξιοσημείωτη αξία. Αν περιλαμβάνονται βίδες ίσως να μην είναι κατάλληλες για το υλικό του τοίχου, του ταβανιού ή του πατωμάτος σας. Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο.



**ВНИМАНИЕ!**  
Какие бы оборудование HiFi вы ни пользовались, будь то плазменный, ЖК или стандартный телевизор, проектор или проекционный экран, - все они представляют значительную ценность. Не всегда крепления, прилагаемые в комплекте, подходят к материалу ваших стен, потолка или пола. При необходимости замените их на более подходящие.



**IMPORTANT!**  
Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value. If screws are included they may not be suitable for the material of your wall, ceiling or floor. Replace the screws with suitable ones if needed.



**VIKTIGT!**  
Din plasmaskärm, LCD-skärm, TV, projektor, projektorsskärm eller annan HiFi-utrustning representerar ett ansenligt värde. Om skruvar medföljer utrustningen är det inte säkert att de passar för materialet i väggen, taket eller golvet! Byt ut skruvarna mot lämpliga skruvar om så krävs. Kontakta en expert om du är osäker på något i samband med monteringen av produkten.



**IMPORTANTE**  
Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que están formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso.



**ÖNEMLİ!**  
Plazma, LCD, TV, Projekör, Projektör Ekranınız veya diğer HiFi cihazınız son derece değerlidir. Birlikte verilen vidalar duvar, tavan veya döşeme teçhizatınıza uygun olmayabilir. Gerektiğinde vidaları uygun olanlarla değiştirin.



**TÄRKEÄ!**  
Plasma- tai nestekidenäyttötyn, televisoiden, projektorien ja niiden valkokankaiden sekä muiden hiifi-laitteiden arvo on huomattava. Laitteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin. Korvaa ne tarvittaessa sopivilla ruuveilla.



**重要提示!**  
您的等离子、LCD、TV、投影机、投影机屏幕或其它 HiFi 设备都有着不菲的价值。如果附有螺钉，它们可能不适合您的墙壁、天花板或地板。如果需要，请将螺钉更换为适当的型号。



**IMPORTANT!**  
Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel Hi Fi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées.

**WARRANTY CARD**

MULTIBRACKETS.COM

MULTIBRACKETS™ Limited Warranty  
Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty:

- FIVE (5) years for metal video monitor mounts; all racks and non-electrical rack accessories
- ONE (1) year for all motorized and/or automated products, plastic speaker mounts; all speaker stands; all furniture; all wood (MDF) accessories

 
For warranty claims made during the Warranty Period, MULTIBRACKETS will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges. This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this Limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.


Multibrackets™ Stockholm Sweden 2014, www.multibrackets.com




**Warning!**  
Always check the depth of the holes before starting an installation.  
التأكد دائما من عمق الثقوب قبل أن تبدأ في عملية التركيب.  
**ADVARSEL!**  
Kontroller alltid hullernes dybde, før du går i gang med en installasjon.  
**WARNING!**  
Vor Beginn des Einbaus immer die Tiefe der Bohrungen überprüfen.  
**ΠΡΕΙΔΟΠΟΙΗΣΗ!**  
Ελέγξτε πάντοτε το βάθος των οπών προτού ξεκινήσετε την εγκατάσταση.  
**WARNING!**  
Always check the depth of the holes before starting an installation.  
**[AVISO!]**  
Controle sempre la profundidad de los agujeros antes de iniciar una instalación.  
**VAROITUS!**  
Selvitä reikien syvyys ennen asentamisen aloittamista.  
**ATTENTION!**  
Vérifiez toujours la profondeur des trous avant de commencer l'installation.  
**ATTENZIONE!**  
Verificare sempre la profondità dei fori prima dell'installazione.  
**ADVARSEL!**  
Sjekk alltid hvor dype hullene er før du begynner å montere.  
**OSTRZEŻENIE!**  
Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość otworów.  
**ΠΡΕΔΥΠΕΡΧΕΙΜΕΝΟ!**  
Πριν εγκαταστήσετε σκεύος, ελέγξτε τη γλυβύνη των οπών.  
**VAROITUS!**  
Kontrollera alltid hållens djup innan en installation påbörjas.  
**UVAR!**  
Montaži başlamadan önce delma deliklerin derinliğini kontrol edin.  
**警告!**  
请在开始安装前检查孔洞的深度。

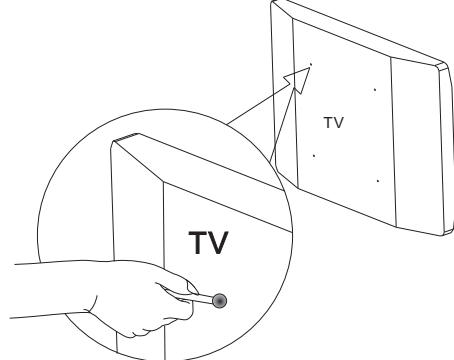


<p>Motorized Ceiling Mount ( x1 ) A</p>		<p>VESA plate (x1) B</p>		<p>ceiling template (x1) C</p>		<p>decorative cover (x4) D</p>					
<p>VESA adapter (x2) E</p>		<p>VESA adapter (x2) F</p>		<p>IR receiver (x1) G</p>		<p>remote control (x1) H</p>		<p>power supply (x1) I</p>		<p>cable tie (x4) J</p>	
<p>M5x14 (x4) M-A</p>		<p>M6x14 (x4) M-B</p>		<p>M8x20 (x4) M-C</p>		<p>M6x30 (x4) M-D</p>		<p>M8x30 (x4) M-E</p>		<p>D5 washer (x4) M-F</p>	
<p>D8 washer (x4) M-G</p>		<p>small spacer (x8) M-H</p>		<p>big spacer (x4) M-I</p>		<p>ST6.3x55 (x6) W-A</p>		<p>concrete anchor (x6) W-B</p>		<p>D6 washer (x6) W-C</p>	

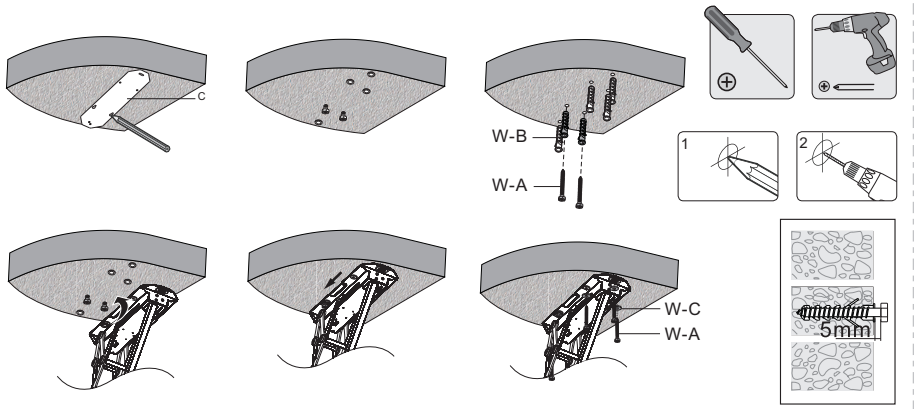 


2

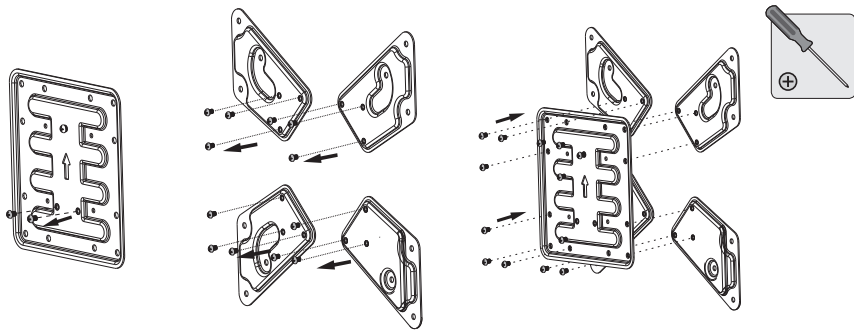 

VESA 100x100 200x100 200x200


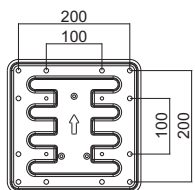 


VESA 300x300 400x200 400x400

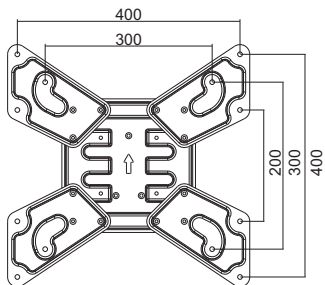 



2a

  VESA 100x100 200x100 200x200

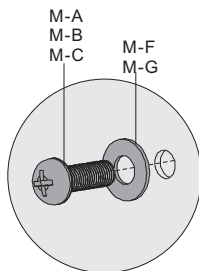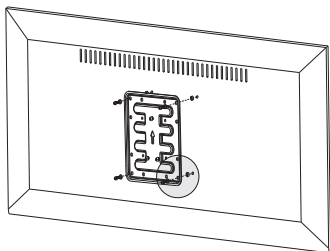






2b

  VESA 300x300 400x200 400x400

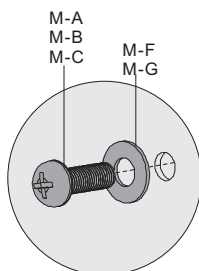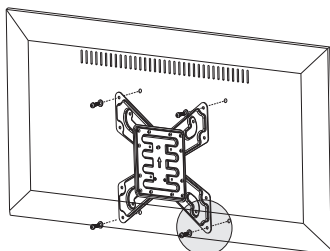






2c

     VESA 100x100 200x100 200x200

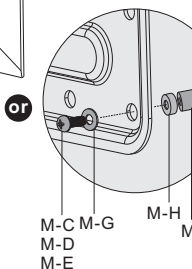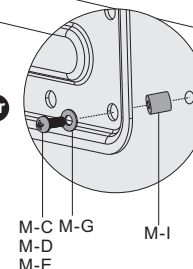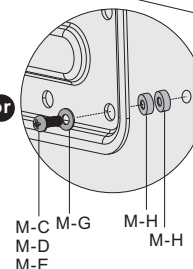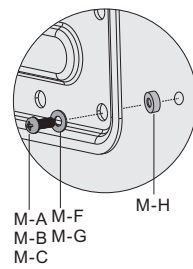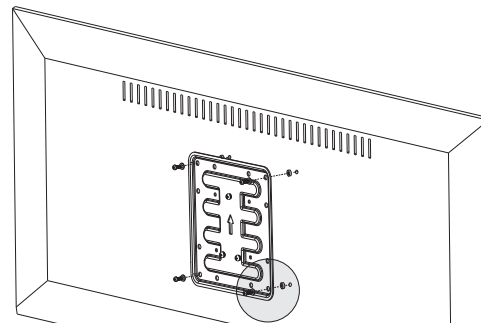


2d

     
VESA 300x300 400x200 400x400

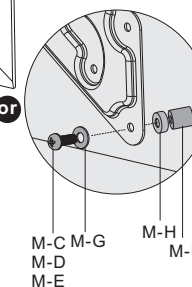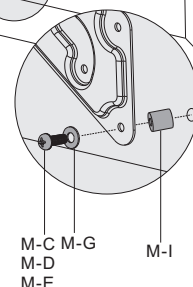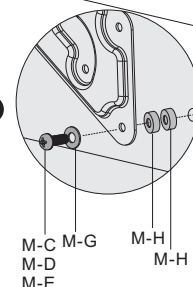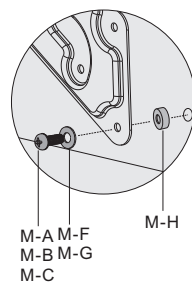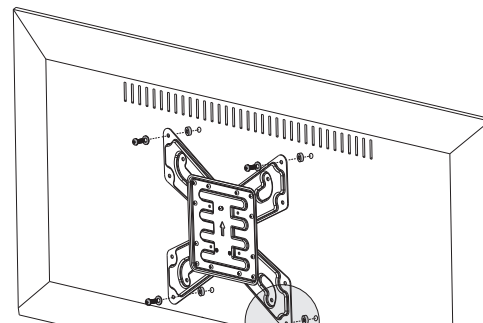

3

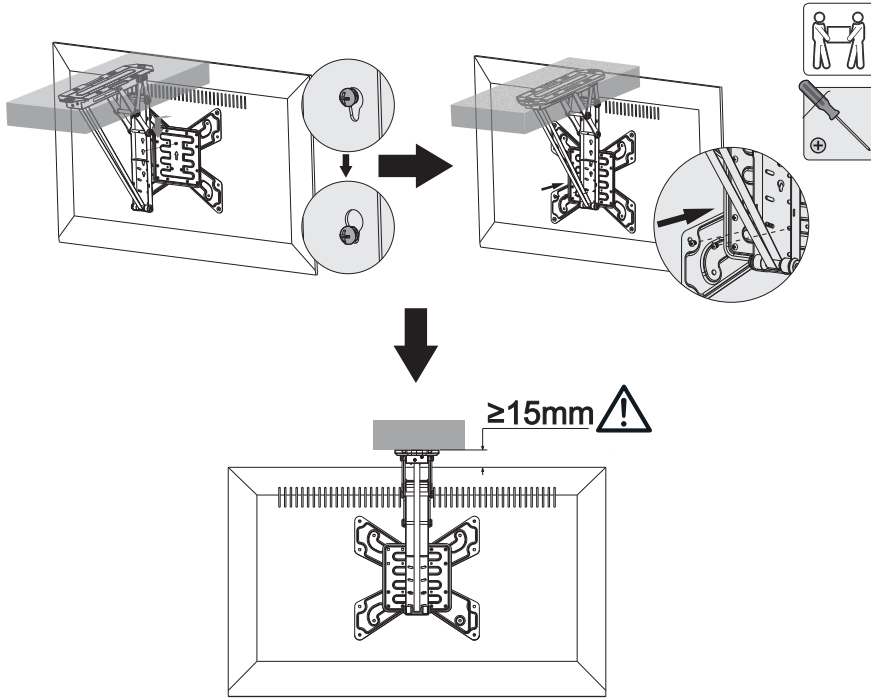 


4

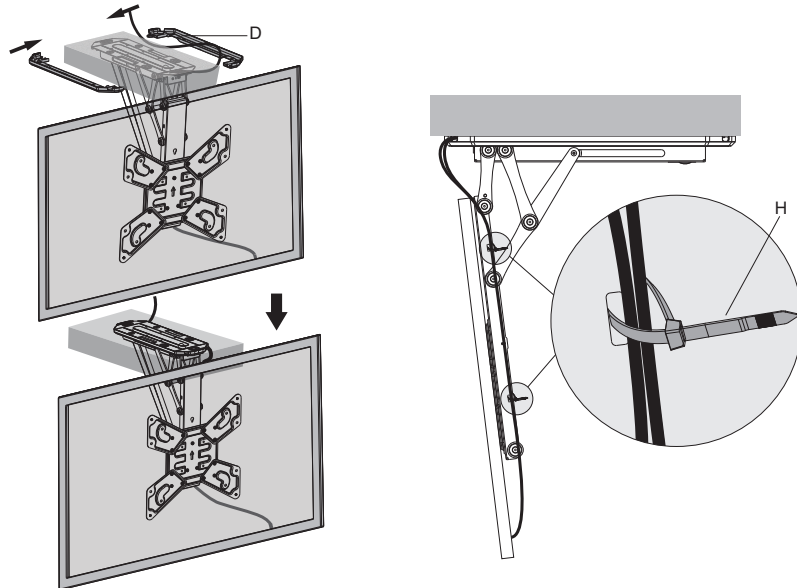 


5

**⚠ Do not open the electrical cover please.**

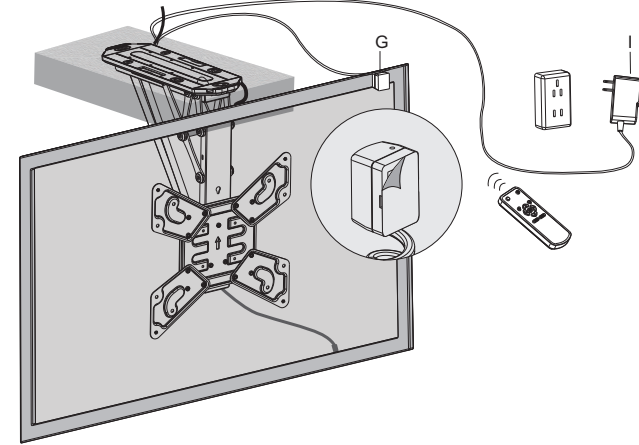 

6

 remote control

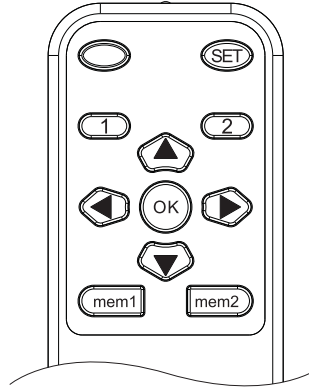

**Remote control operation instructions**

**NOTE : No-load running prohibited.**

**STEP 1:**When powered, the buzzer sounds once beep, the TV ceiling mount will be in standby state. The TV ceiling mount is installed on a flat surface by default, and has a 0° ~75° continuous adjustable tilt.

(Please reset the tilt angle if you install the TV ceiling mount on a pitched surface. Press and hold for 5 seconds and repeat four times. The system will automatically find the position without human intervention. Once this is done, the system will automatically stop at the maximum position. **Please ignore this step if this mount is not intended for installation on a pitched surface.**)

**STEP 2:** Press and release to return the TV ceiling mount flat against the ceiling surface and hear one beep from the buzzer, the system will then enter a working condition.

**Buttons function instructions**

Follow the Key function instructions below to operate.

- OUT button, downward movement
- IN button, upward movement
- Stop button
- Memory button1. Press and hold for 5 seconds, the buzzer will sound twice beep beep, The memory is saved as location 1.
- Memory button2. Press and hold for 5 seconds, the buzzer will sound twice beep beep, The memory is saved as location 2.
- + To recall the button(location 1). Press and release button, and then press button, The TV ceiling mount will automatically swivel to the location1 after the buzzer sounds once.
- + To recall the button(location 2). Press and release button, and then press button, The TV ceiling mount will automatically swivel to the location2 after the buzzer sounds once.